

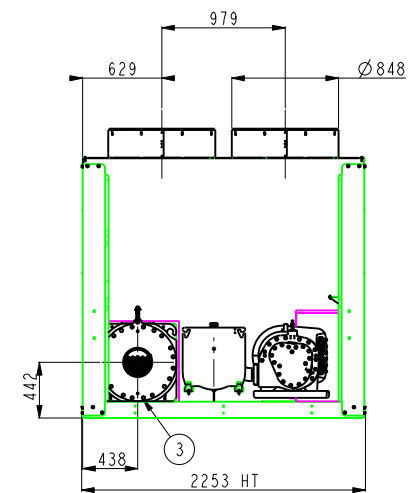
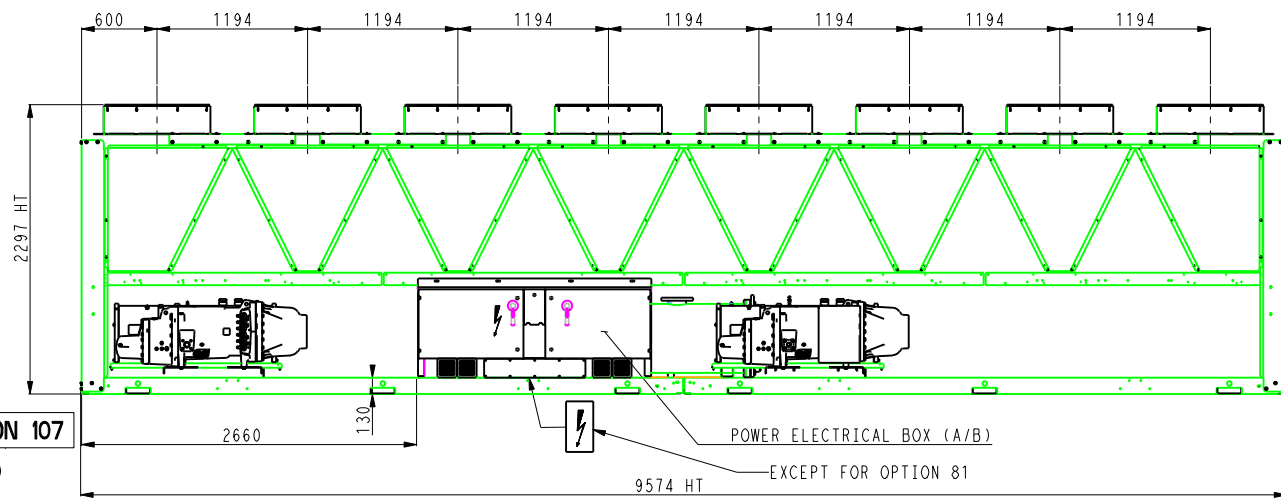


\* FOR MAINTENANCE, IF THE DISTANCE IS BELOW 500 mm, THE EXTRACTION OF THE FINAL COILS BETWEEN MODULES IS CARRIED OUT BY DISMOUNTING THE ROOF OF COVER OF THE MODULE CORRESPONDING "V" COILS.




TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Sheet 1/11 Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		


**MODULE 1**

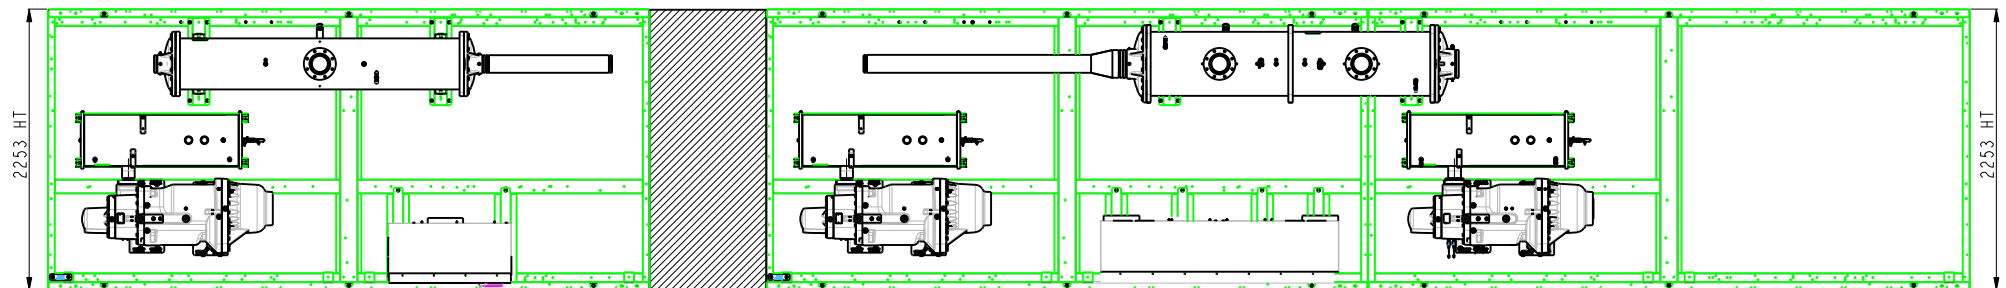

**OPTION 107**

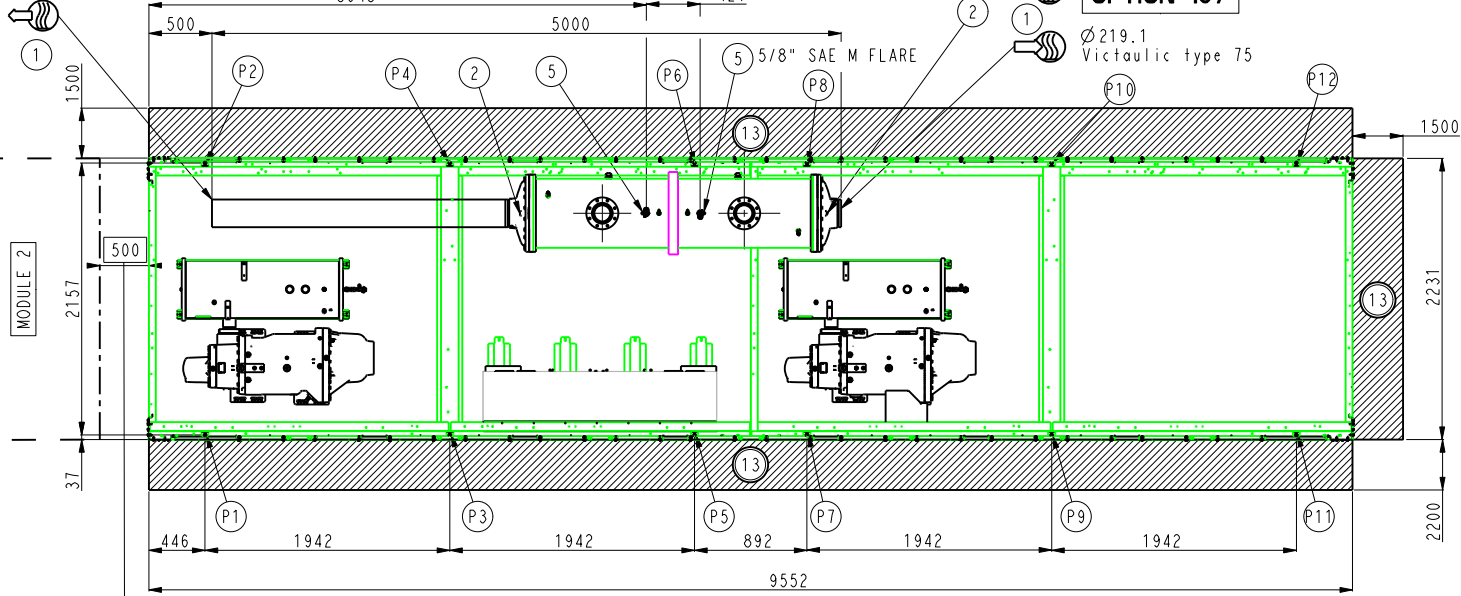


**OPTION 107**

 

SPACE REQUIRED BETWEEN  
MODULE 1 AND MODULE 2 FOR  
COILS SERVICE

TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Sheet 2/11 Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		

**MODULE 2**

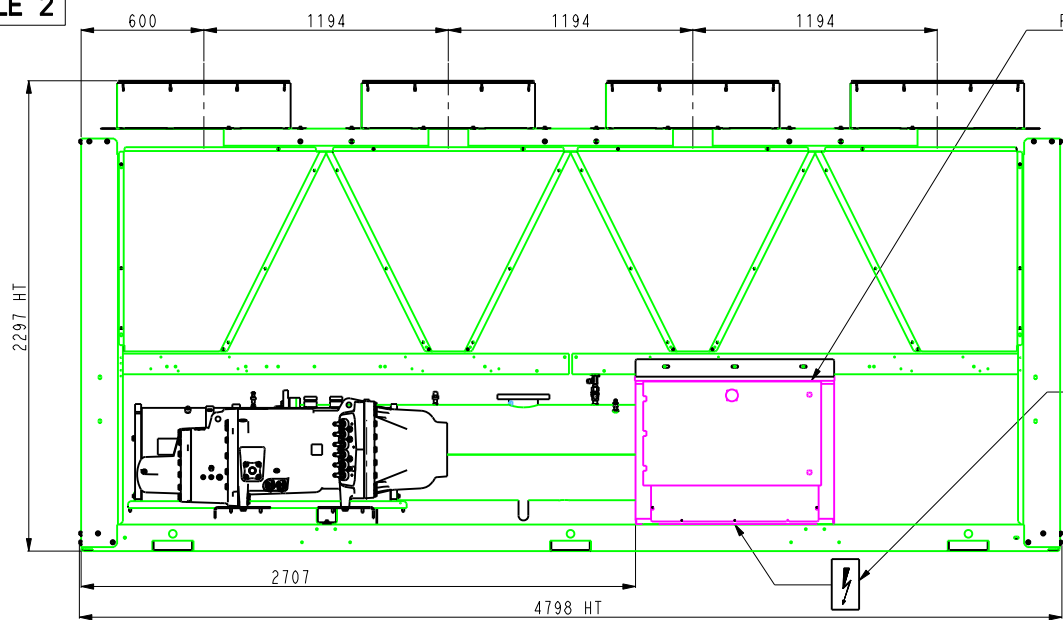

POWER ELECTRICAL BOX(C)

(15)


**OPTION 107**



(1)

Ø168.3  
VICTAULIC STYLE 75

SINGLE ELECTRICAL SUPPLY  
FOR OPTION 81

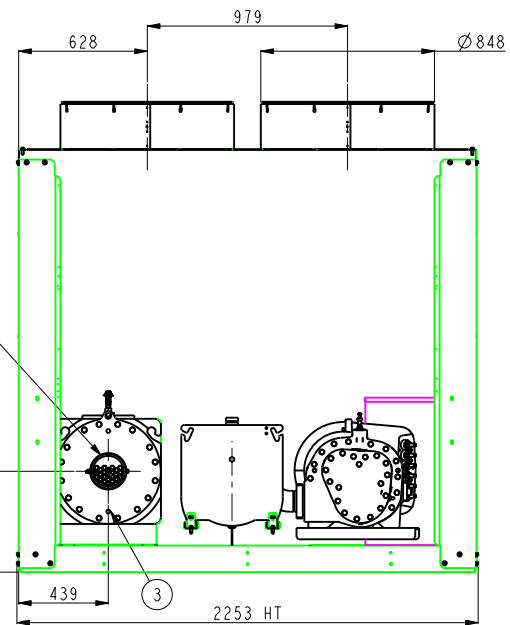

**OPTION 107**


Ø168.3  
VICTAULIC STYLE 75

SPACE REQUIRED BETWEEN MODULE 1  
AND MODULE 2 FOR COILS SERVICE

(1)

500

MODULE 1

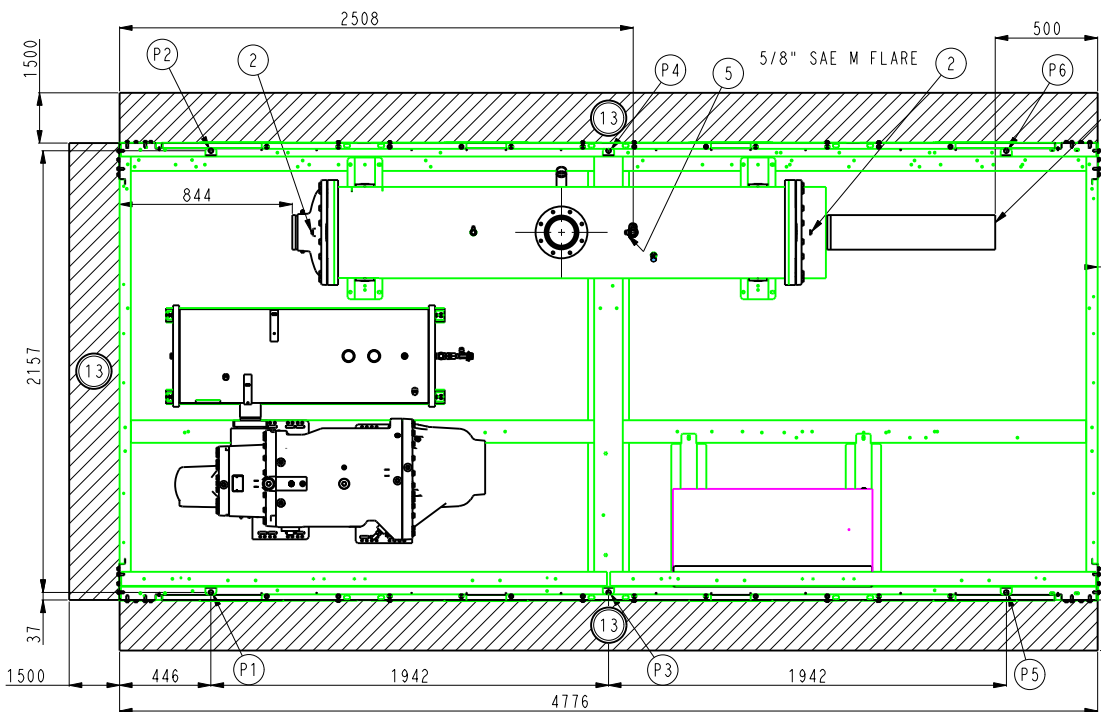

TOLERANCE

±10

30XA 1402 - 1502

MODULE 1&2



DATE

02-04-2012

00DCG000041800


Feuille

Sheet



3/11

Indice


C

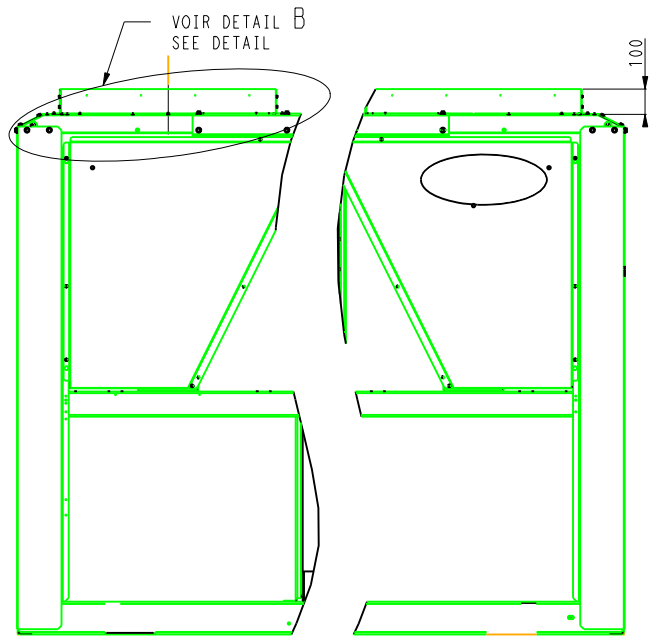

OPTION 10

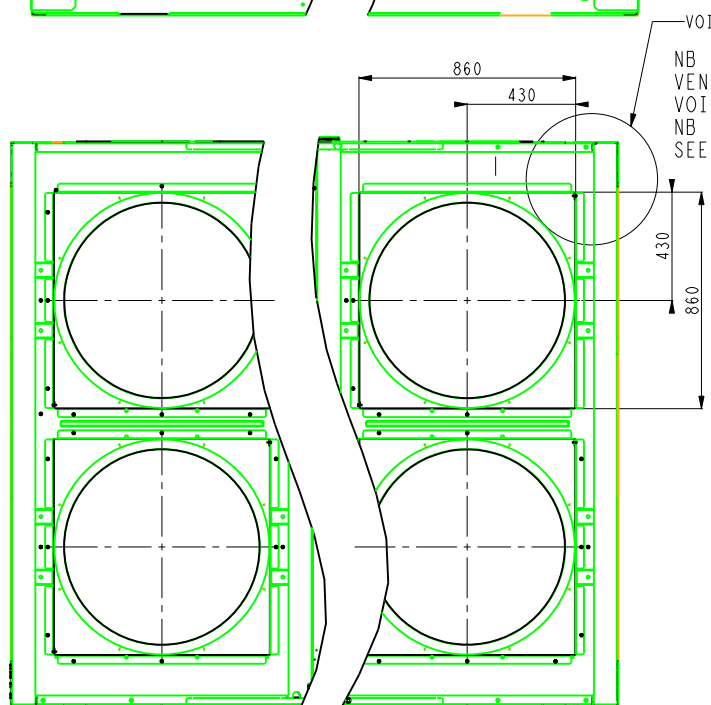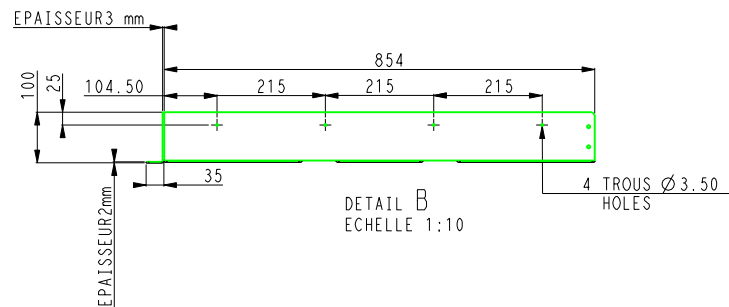


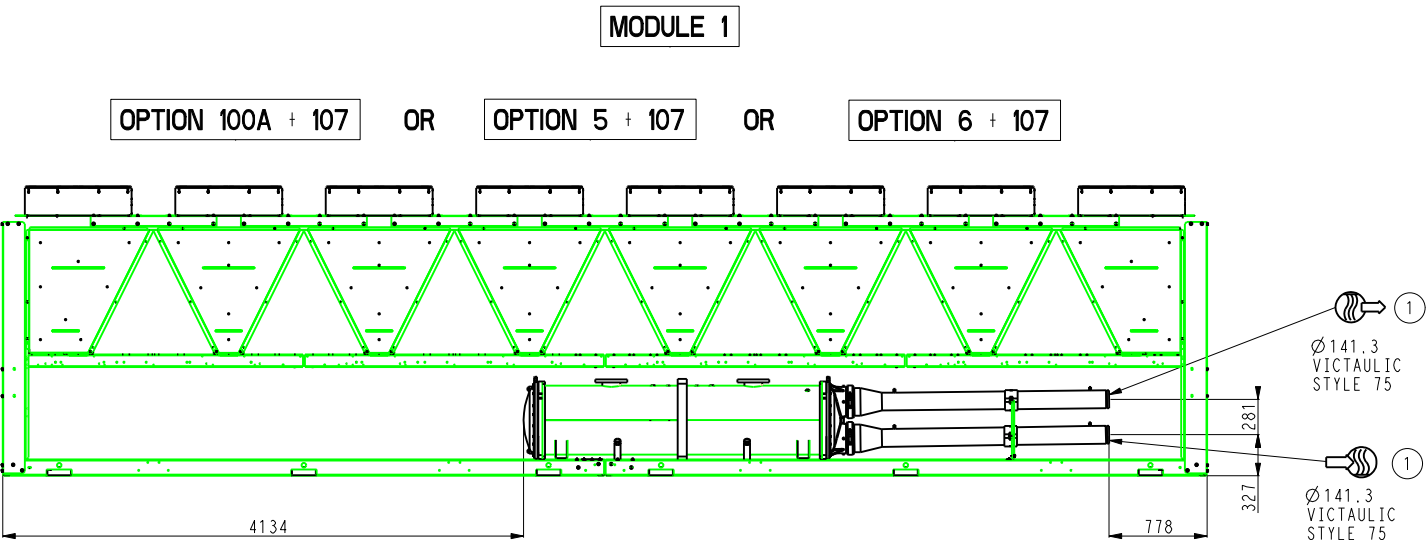
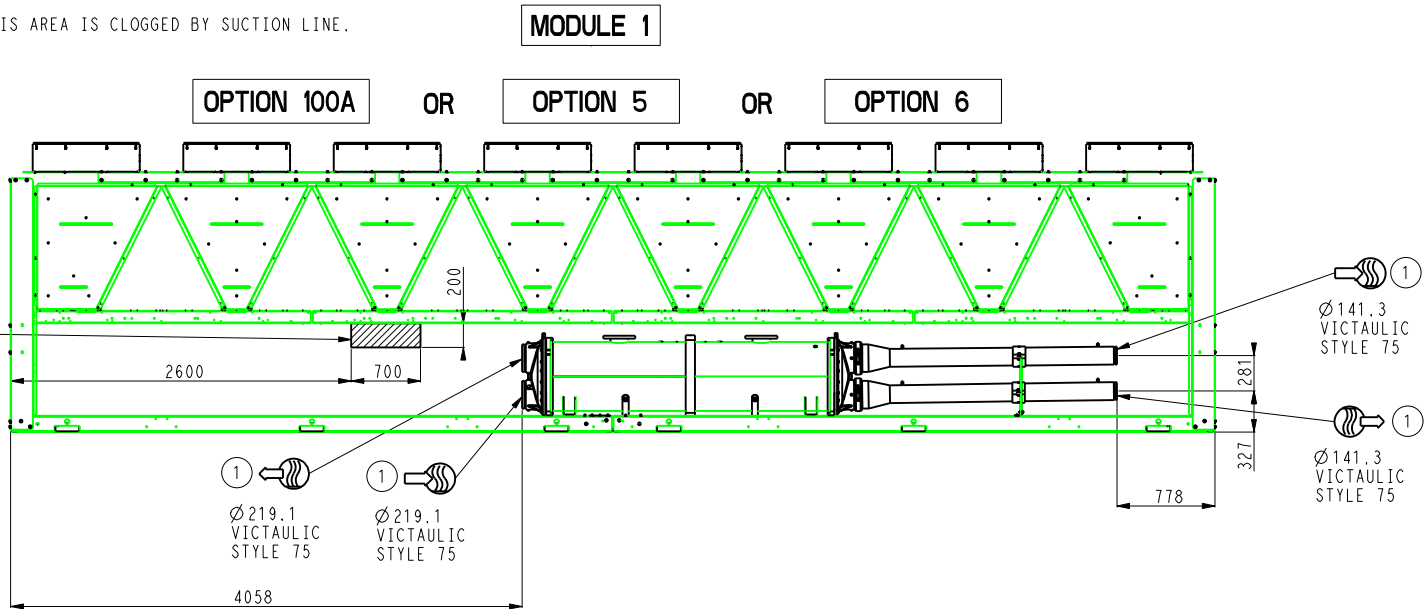
VOIR DETAIL A  
 NB : EQUERRES DE RACCORDEMENT GAINAGE VENTILATION POUR CHAQUE VENTILATEUR VOIR COTES SUR DETAIL A ET B.  
 NB : ANGLE PLATES FOR EACH FAN SEE DETAILS A AND B FOR DIMENSIONS

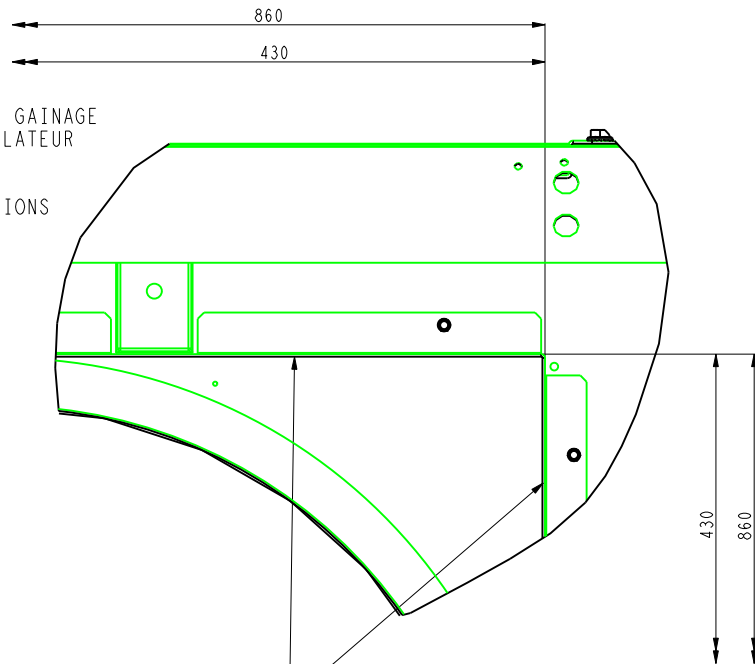


EQUERRES RACCORDEMENT GAINE DE VENTILATION  
 ANGLE PLATES FOR VENTILATION DUCT HIDING

TOLERANCE	30XA 1402 - 1502		DATE	02-04-2012	Feuille Sheet 4/11 Indice C
±10	MODULE 1&2		00DCG000041800		



 THIS AREA IS CLOGGED BY SUCTION LINE.



TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Steel Sheet Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		



MODULE 2

OPTION 100A OR OPTION 5 OR OPTION 6



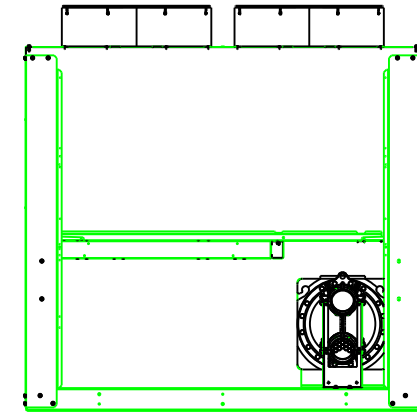
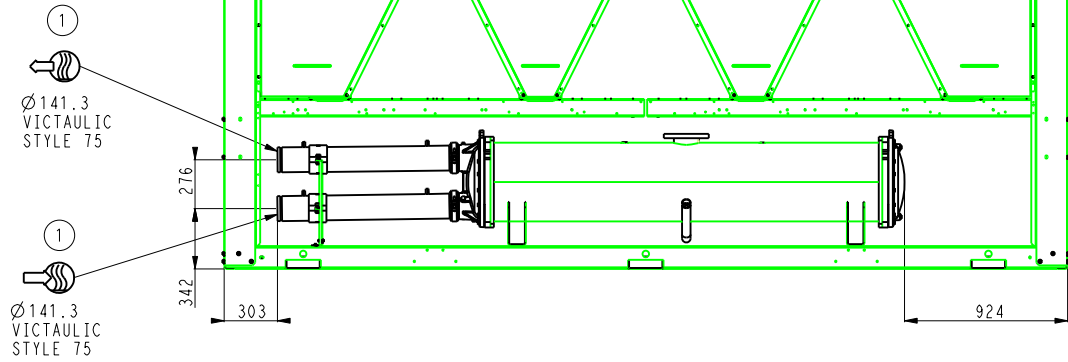


MODULE 2

OPTION 100A + 107 OR OPTION 5 + 107 OR OPTION 6 + 107

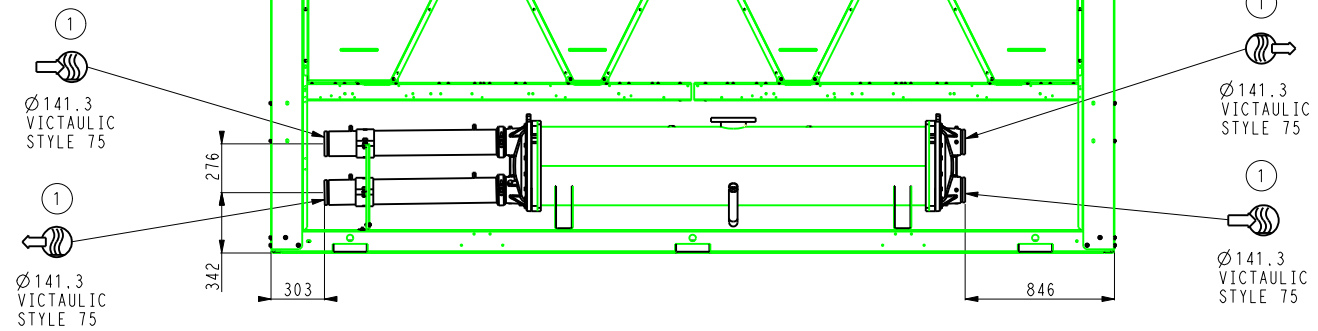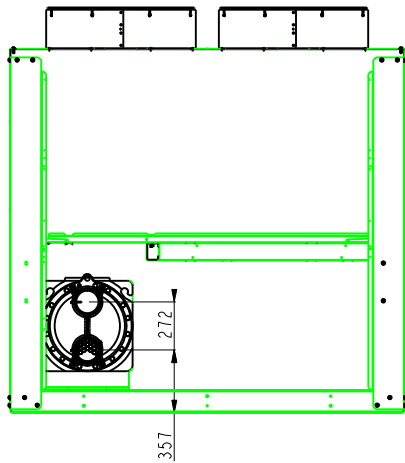


TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Steel 5/11 Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		

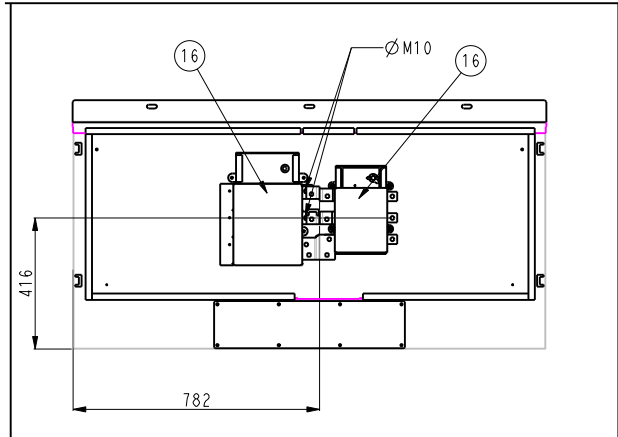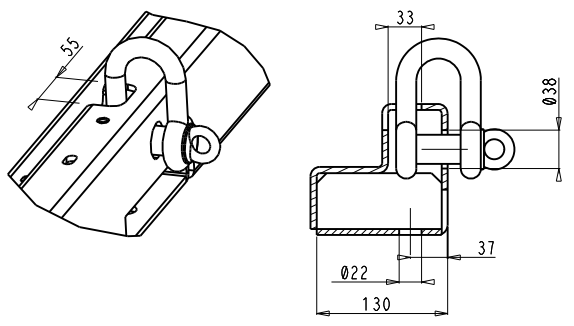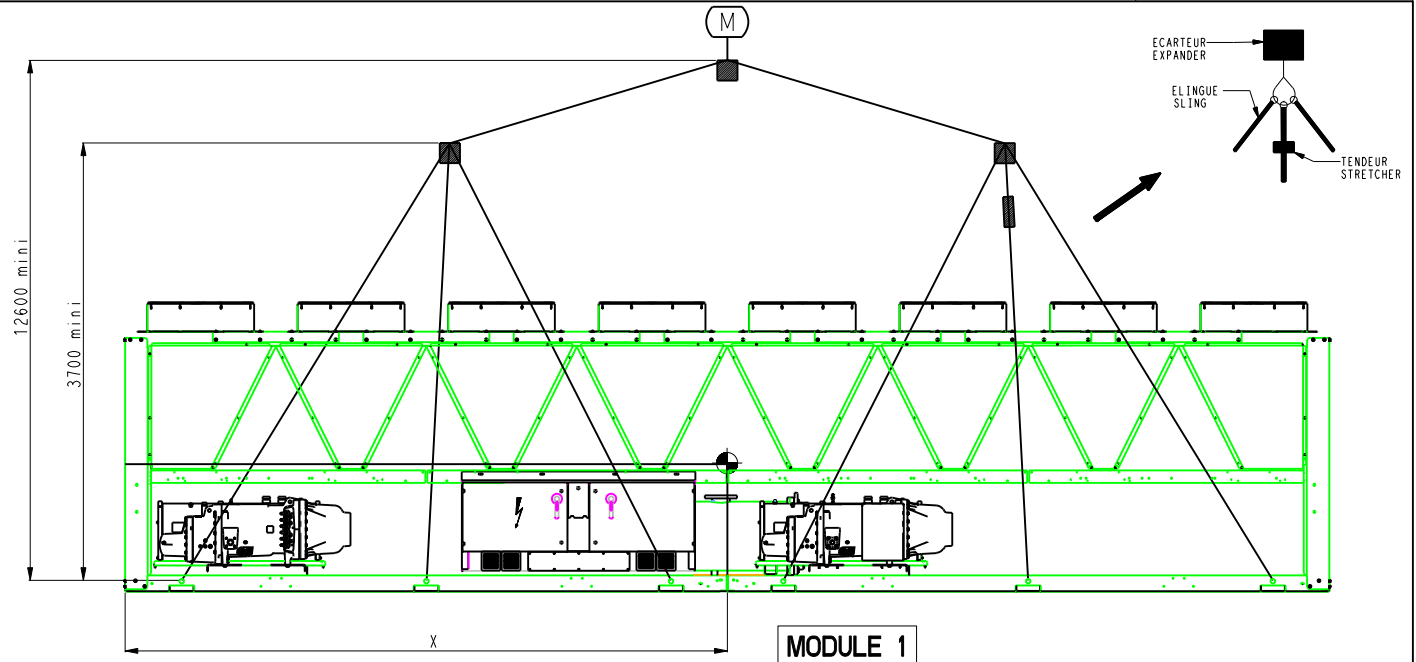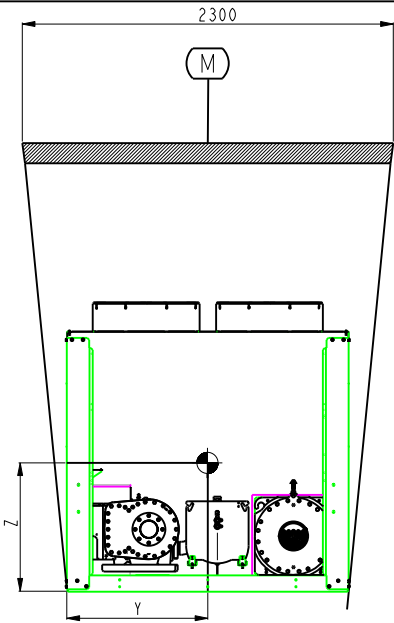

ELECTRICAL BOX: POWER CONNECTION




A400  
30XA 1402

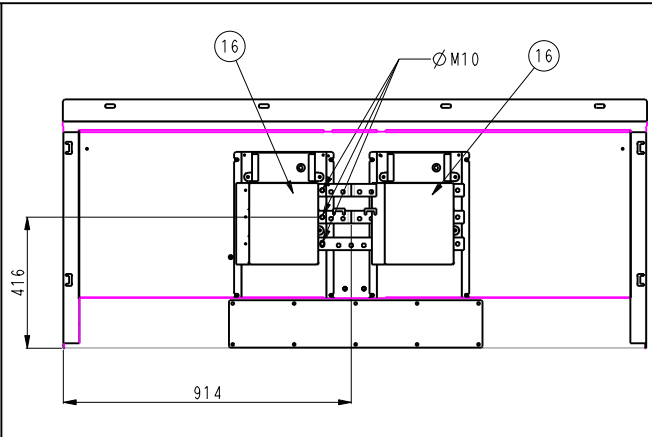



ELECTRICAL BOX: POWER CONNECTION

A300  
30XA 1502

TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Sheet 7711 Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		

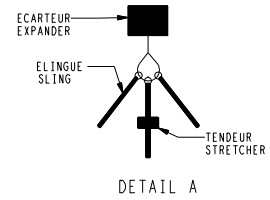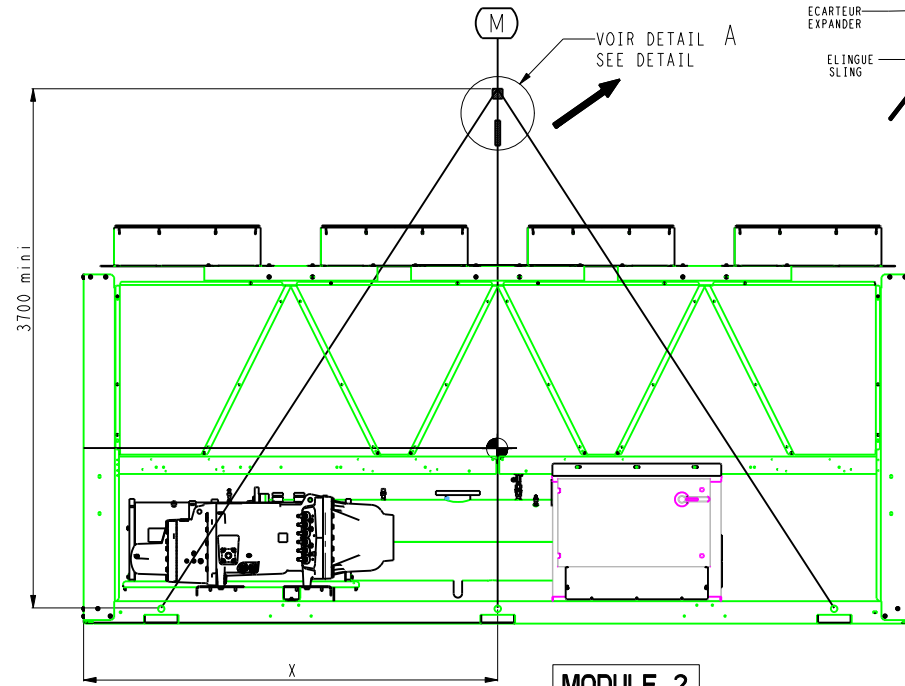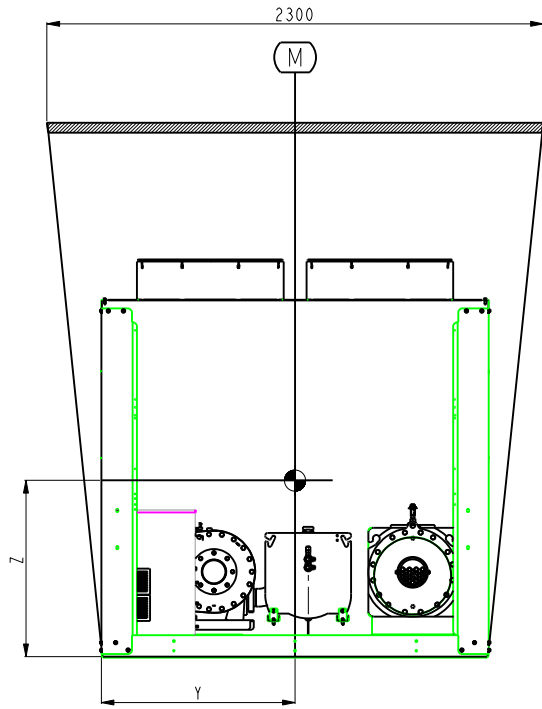


MODULE 2

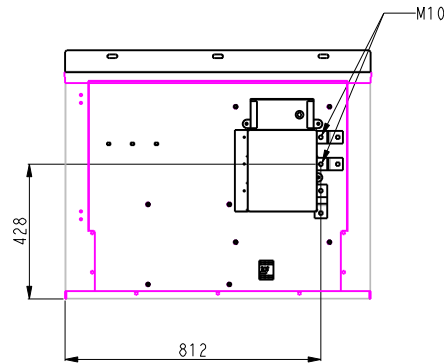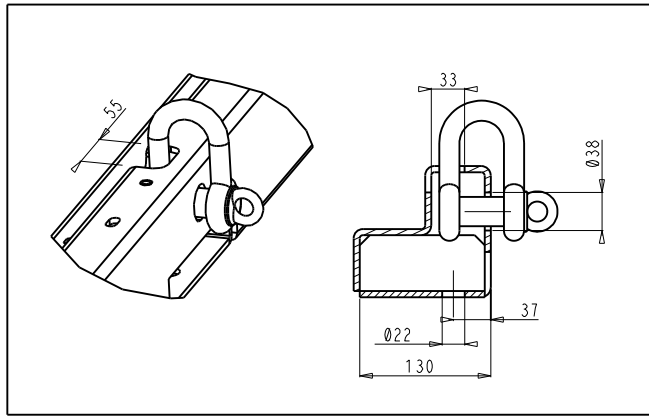

STD POWER ELECTRICAL BOX

A200

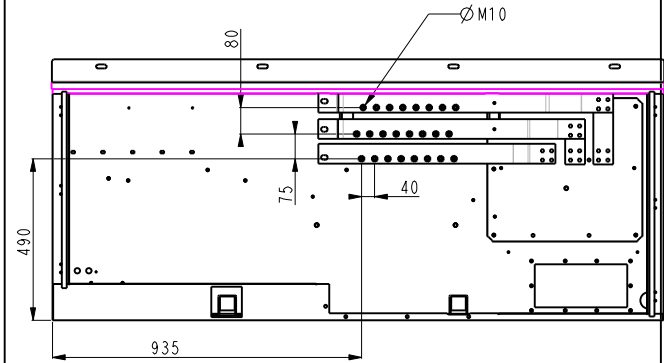

POWER ELECTRICAL BOX  
OPTION 81

TOLERANCE ±10	30XA 1402 - 1502		DATE	Feuille Sheet 5/11 Indice C
	MODULE 1&2		02-04-2012	
		00DCG000041800		



	TAILLE SIZE	OPTIONS	PT (Kg)	P1 (Kg)	P2 (Kg)	P3 (Kg)	P4 (Kg)	P5 (Kg)	P6 (Kg)	P7 (Kg)	P8 (Kg)	P9 (Kg)	P10 (Kg)	P11 (Kg)	P12 (Kg)	X (mm)	Y (mm)	Z (mm)
<b>MODULE 1</b>	30XA 1402	OPT 279	8126	812	733	767	692	722	652	701	633	656	592	612	553	3562	1005	804
	30XA 1502	OPT 279	8316	841	745	794	702	747	660	724	641	677	599	630	557	3528	983	764
	30XA 1402	OPT 23 + 279	8306	830	749	784	708	738	666	717	647	671	606	625	565	3562	1005	804
	30XA 1502	OPT 23 + 279	8456	856	757	807	714	759	671	737	651	688	609	640	566	3528	983	764
	30XA 1402	STD UNIT	7776	777	702	734	663	691	624	671	606	628	567	586	529	3562	1005	804
	30XA 1502	STD UNIT	7926	802	710	756	669	712	629	690	611	645	571	600	531	3528	983	764
	30XA 1402	OPT 254 OR 255 + 279	9180	917	928	867	782	816	736	792	715	742	669	691	624	3562	1005	804
	30XA 1502	OPT 254 OR 255 + 279	9340	945	837	891	788	839	741	814	719	760	672	707	625	3528	983	764
	30XA 1402	OPT 23	7956	795	718	751	679	707	638	687	620	643	581	599	541	3562	1005	804
	30XA 1502	OPT 23	8066	817	722	769	681	724	640	703	621	656	581	610	540	3528	983	764
	30XA 1402	OPT 254 OR 255	8830	882	897	834	753	785	708	762	688	714	644	665	600	3562	1005	804
	30XA 1502	OPT 254 OR 255	8950	906	802	853	755	804	710	780	689	728	644	677	599	3528	983	764

TOLERANCE  
±10

30XA 1402 - 1502  
MODULE 1&2



DATE  
02-04-2012

00DCG000041800

Feuille  
Sheet  
9/11  
Indice  
C

	TAILLE SIZE	OPTIONS	PT (Kg)	P1 (Kg)	P2 (Kg)	P3 (Kg)	P4 (Kg)	P5 (Kg)	P6 (Kg)	X (mm)	Y (mm)	Z (mm)
<b>MODULE 2</b>	30XA 1402	OPT 279	4143	911	814	729	651	548	489	1420	993	752
	30XA 1502	OPT 279	4143	911	814	729	651	548	489	1420	993	752
	30XA 1402	OPT 23 + 279	4213	927	828	741	662	557	498	1420	993	752
	30XA 1502	OPT 23 + 279	4213	927	828	741	662	557	498	1420	993	752
	30XA 1402	STD UNIT	3953	870	777	696	621	523	467	1420	993	752
	30XA 1502	STD UNIT	3953	870	777	696	621	523	467	1420	993	752
	30XA 1402	OPT 254 OR 255 + 279	4650	1023	914	818	731	615	549	1420	993	752
	30XA 1502	OPT 254 OR 255 + 279	4650	1023	914	818	731	615	549	1420	993	752
	30XA 1402	OPT 23	4023	886	791	708	632	532	476	1420	993	752
	30XA 1502	OPT 23	4023	886	791	708	632	532	476	1420	993	752
	30XA 1402	OPT 254 OR 255	4460	982	877	785	701	590	527	1420	993	752
	30XA 1502	OPT 254 OR 255	4460	982	877	785	701	590	527	1420	993	752

TOLERANCE  
±10



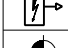

30XA 1402 - 1502  
MODULE 1&2



DATE  
02-04-2012

00DCG000041800

Feuille  
Sheet  
10/11  
Indice  
C

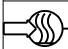	ENGLISH	FRANCAIS	GERMAIN	ESPAÑOL	ITALIANO
① →	Cooler water inlet and outlet	Entrée et sortie eau évaporateur	Kaltwasser eintritt und austritt	Entrada y salida agua al evaporador	Entrata e uscita acqua evaporatore
② →	Cooler air vent	Purge air évaporateur	Kaltwasser entlüftungsventil	Purgador aire evaporador	Valvola sfogo aria evaporatore
③ →	Water drain	Purge eau évaporateur	Kaltwasser abfluss	Drenaje agua evaporador	Scarico acqua evaporatore
④ →	NA	NA	NA	NA	NA
⑤ →	Safety relief valve LP	Soupape de sécurité BP	Verdampfer sicherheitsventil LP	Valvula de seguridad LP	Valvola di sicurezza LP
⑥ →	NA	NA	NA	NA	NA
⑦ →	NA	NA	NA	NA	NA
⑧ →	NA	NA	NA	NA	NA
⑨ →	Safety relief valve HP	Soupape de sécurité HP	Verdampfer sicherheitsventil HP	Valvula de seguridad HP	Valvola di sicurezza HP
⑩ →	NA	NA	NA	NA	NA
⑪ →	NA	NA	NA	NA	NA
⑫ →	NA	NA	NA	NA	NA
⑬ →	Services clearances required	Espace nécessaire à la maintenance	Freiraum für wartung	Espacio necesario para servicio y mantenimiento	Spazio necessario per il servizio
⑭ →	Space required to remove cooler tubes	Espace nécessaire au réentubage de l'évaporateur	Freiraum für rohren austausch	Espacio necesario para cambiar tubos de los intercambiadores	Spazio necessario per la rimozione dei tube evap.
⑮ →	Electrical box	Coffret électrique	Schaltschrank	Caja electrica	Pannello elettrico
⑯ →	Main disconnect switch	Interrupteur général	Haupttrennschalter	Interruptor de desconexión principal	Sezionatore general
⑰ →	NA	NA	NA	NA	NA
PT →	Total operating weight	Poids total en fonctionnement	Betriebsgewicht	Peso en funcionamiento	Peso in funzionamento
	Inlet water	Entrée eau	Wasser eintritt	Entrada agua	Entrata acqua
	Outlet water	Sortie eau	Wasser austritt	Salida agua	Uscita acqua
	Electrical supply entry	Entrée raccordement électrique	Strom Anschlüsse	Entrada cables electricos	Entrata cavi alimentazione
	Center of gravity	Centre de gravité	Maschinenschwerpunkt	Centro de gravedad	Centro di gravita
(M)	Handling Rigging of the unit; the sizing of the rigging or lifting elements is the responsibility of the installer	Manutention de l'unité Le dimensionnement des éléments de manutention ou de levage sont sous la responsabilité du manutentionnaire	Anheben des geräts Der installateur ist für die dimensionierung der hebeelemente verantwortlich	Sostienimiento de la unidad Las dimensiones de los elementos de sostienimiento o levantamiento es responsabilidad de instalador	Sollevamento dell'apparechio La responsabilita del dimensionamento degli elementi di sistema di sollevamento e di pertinenza dell'installatore

TOLERANCE

±10

30XA 1402 - 1502

MODULE 1&amp;2



DATE

02-04-2012

00DCG000041800

Feuille

Sheet

17/11

Indice

C